

Network Camera

User Manual

Legal Information

©2023 Homaxi Technology Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual on the Homaxi website (*https://www.Homaxi.com*).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

Homaxi and other Homaxi trademarks and logos are the properties of Homaxi in various jurisdictions.

Disclaimer

To The Maximum Extent Permitted By Applicable Law, This Manual And The Product Described, With Its Hardware, Software And Firmware, Are Provided 'As Is' And 'With All Faults And Errors'. Homaxi Makes No Warranties, Express Or Implied, Including Without Limitation, Merchantability, Satisfactory Quality, Or Fitness For a Particular Purpose. The Use Of The Product By You Is At Your Own Risk. In No Event Will Homaxi Be Liable To You For Any Special, Consequential, Incidental, Or Indirect Damages, Including, Among Others, Damages For Loss Of Business Profits, Business Interruption, Or Loss Of Data, Corruption Of Systems, Or Loss Of Documentation, Whether Based On Breach Of Contract, Tort (Including Negligence), Product Liability, Or Otherwise, In Connection With The Use Of The Product, Even If Homaxi Has Been Advised Of The Possibility Of Such Damages Or Loss.

You Acknowledge That The Nature Of The Internet Provides For Inherent Security Risks, And Homaxi Shall Not Take Any Responsibilities For Abnormal Operation, Privacy Leakage Or Other Damages Resulting From Cyber-Attack, Hacker Attack, Virus Infection, Or Other Internet Security Risks; However, Homaxi Will Provide Timely Technical Support If Required.

You Agree To Use This Product In Compliance With All Applicable Laws, And You Are Solely Responsible For Ensuring That Your Use Conforms To The Applicable Law. Especially, You Are Responsible, For Using This Product In a Manner That Does Not Infringe On The Rights Of Third Parties, Including Without Limitation, Rights Of Publicity, Intellectual Property Rights, or Data Protection and Other Privacy Rights. You Shall Not Use This Product For Any Prohibited End-Uses, Including The Development Or Production Of Weapons Of Mass Destruction, The Development Or Production Of Chemical Or Biological Weapons, Any Activities In The Context Related To Any Nuclear Explosive Or Unsafe Nuclear Fuel-Cycle, Or In Support Of Human Rights Abuses.

In The Event Of Any Conflicts Between This Manual And The Applicable Law, The Later Prevails.

Regulatory Information

FCC Information

Please take attention that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
A Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
A Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
Warning	Remind the matters to be noted in the operation, improper operation may lead to data loss or equipment damage.
Note	Provides additional information to emphasize or supplement important points of the main text.

Safety Instruction

• Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

• In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.

• Firmly connect the plug to the power socket. Do not connect several devices to one power adapter. Power off the device before connecting and disconnecting accessories and peripherals.

- Shock hazard! Disconnect all power sources before maintenance.
- The equipment must be connected to an earthed mains socket-outlet.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

• ⁴ Indicates hazardous live and the external wiring connected to the terminals requires installation by an instructed person.

• Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.

• Input voltage should meet the SELV (Safety Extra Low Voltage) and the LPS (Limited Power Source) according to the IEC62368.

- High touch current! Connect to earth before connecting to the power supply.
- If smoke, odor or noise rises from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Use the device in conjunction with an UPS, and use factory-recommended HDD if possible.
- This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- This equipment is not suitable for use in locations where children are likely to be present.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
- Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.

• Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.

- Dispose of used batteries according to the instructions.
- Keep body parts away from fan blades and motors. Disconnect the power source during servicing.
- Keep body parts away from motors. Disconnect the power source during servicing.

Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- The device is designed for indoor use only. Install it in a well-ventilated, dust-free environment without liquids.
- Ensure the recorder is properly secured to a rack or shelf. Major shocks or jolts to the recorder as a result of dropping it may cause damage to the sensitive electronics within the recorder.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids shall be placed on the equipment, such as vases.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc. The openings shall never be blocked by placing the equipment on a bed, sofa, rug or other similar surfaces.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- For certain models, the equipment has been designed, when required, modified for connection to an IT power distribution system.
- Item identifies the battery holder itself and identifies the positioning of the cell(s) inside the battery holder.
- + identifies the positive terminal(s) of equipment that is used with, or generates direct current. + identifies the negative terminal(s) of equipment that is used with, or generates direct current.
- Keep a minimum 200 mm (7.87 inches) distance around the equipment for sufficient ventilation.
- For certain models, ensure correct wiring of the terminals for connection to an AC mains supply.
- Use only power supplies listed in the user manual or user instructions.
- The USB port of the equipment is used for connecting to a mouse, keyboard, USB flash drive, or Wi-Fi dongle only.
- Use only power supplies listed in the user manual or user instructions.
- Do not touch the sharp edges or corners.

Contents

1. Overview	
1.1. System Requirement	1
1.2. Network Connection	
2. Device Activation and Login	3
2.1. Activate Via a Web Browser	3
2.2. Login	
2.3. Install Plug-ins	4
3. Live View	7
3.1. Introduction of Live View	7
3.2. Start and Stop Live View	8
3.3. Full Screen Preview	
3.4. Adjust Aspect Ratio	9
3.5. Preview Stream Type	9
3.6. Manually triggered sound alerts	9
3.7. Manually triggered light alerts	9
3.8. Dynamic Tracking lines and Smart Rules	
3.9. Multicast View	
3.10. Recording Videos and Capturing Pictures Manually	
3.11. Audio and Talk to the Device	
4. Configuration	
4.1. Local Storage	
4.2. System Parameters	11
4.2.1. Check Device Information	
4.2.2. Set Device Language, Video Format & Host Name	
4.2.3. Time and Date	
4.2.4. User and Account Manage	14
4.3. Network Configuration	20
4.3.1. Configure Device TCP/IP Settings	20
4.3.2. Configure DDNS Settings	21
4.3.3. Configure NAT Settings	
4.3.4. UPNP-TM	
4.3.5. Cloud	23
4.3.6. FTP (File Transfer Protocol)	24

	4.3.7. Email	25
	4.3.8. SNMP	25
	4.3.9. HTTPS	27
	4.3.10 Multicast	28
5	5. Image Parameter Configuration	29
	5.1. Schedule Image Setting	29
	5.2. Image Adjust	29
	5.3. Exposure	29
	5.4. Backlight	
	5.5. White Balance	30
	5.6. Day and Night Mode Switch	
	5.7. Illuminator	31
	5.8. Enhancement	32
	5.9. Privacy Mask	32
6	5. Video and Audio Configuration	
	6.1. Video Settings	
	6.1.1. Stream Type	34
	6.1.2. Video Encode	34
	6.1.3. Complexity level	35
	6.1.4. Video/Audio Enable	35
	6.1.5. Resolution	35
	6.1.6. Frame rate (FPS)	35
	6.1.7. Bit Rate Type	36
	6.1.8. Quality	
	6.1.9. Bit Rate (Kb/S)	
	6.1.10. I Frame Interval	
	6.2. Audio Setting	37
	6.3. ROI	
	6.4. Snapshot Setting	37
	6.5. OSD Setting	
	6.6. Image Superposition	38
7.	7. Event and Alarm Configuration	39
	7.1. Motion Detection	
	7.2. Video Cover Detection	40
	7.3. Alarm in/out	

7.3.1. Alarm Input	41
7.3.2. Alarm Output	42
7.4. Smart Event	
7.4.1. Line Crossing Detection	42
7.4.2. Area Intrusion Detection	43
7.4.3. Region Entrance Detection	
7.4.4. Region Exiting Detection	45
7.4.5. Blurred Detection	45
7.4.6. Scene Change Detection	
7.4.7. Fast Moving Detection	
7.4.8. Loitering Detection	47
7.4.9. People Gathering Detection	47
7.4.10. Unattended Object Detection	48
7.4.11. Object Missing Detection	48
7.4.12. Parking Detection	49
7.4.13. Audio Exception Detection	49
7.5. Face Detection	50
7.5.1. Configure the Face Detection	50
7.5.2. Overlay and Capture Settings	50
7.6. Body Detection	50
7.7. Car Shape Detection	51
7.8. Crossing Line Statistics	
7.8.1. Configure the Crossing line statistics	
7.8.2. Check the Crossing line statistics data	
8. Recording to Local Storage/NAS	53
8.1. Record and Snapshot	
8.1.1. Record setting	
8.1.2. Snapshot Setting	
8.2. Storage Manager	54
8.2.1. Local Storage Manage (Micro-SD Card)	
8.2.2. Connect to NAS	
9. Maintain	
9.1. Reboot Device	
9.2. Restore and Default Settings	57
9.3. Config Export/Import	

9.4. Upgrade device	
9.5. Search and Manage Log	
10. Playback and download video	
10.1. Playback the Recording Video	59
10.2. Download the Video File	59

1. Overview

1.1. System Requirement

Your computer should meet the requirements for visiting and operating the product.

Items	Recommended Specifications	
Operating System	Microsoft Windows XP SP1 or later	
CPU	2.0 GHz or faster	
RAM	1GB	
Display	1024×768 resolution or higher	
Web Browser	• Apple Safari version 5.0.2 or later	
	 Mozilla Firefox version 5.0 or later 	
	 Google Chrome version 18 or later 	
	 Microsoft Edge version 107 or later 	
-	Table 1-1 System Requirement	

📝 Note

The following contents are written based on using Microsoft Windows 10 and Microsoft Edge.

1.2. Network Connection

Before you start:

- Before accessing a network camera from PC, you need to connect the network camera to a PC directly with a network cable or via a switch or router.
- The network camera supports direct power supply and PoE power supply, please make sure the camera is properly powered up before using it.

The following figures show the two methods of cable connection between a network camera and a computer.

1. Connecting Directly

Connect the network camera to the PC with a network cable directly as shown in the following picture.

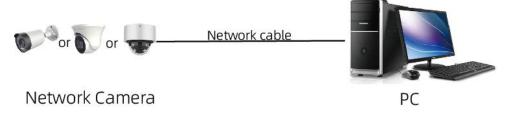


Figure 1-1 Connecting Directly

2. Connecting via a Switch or a Router



Figure 1-2Connecting via a Switch or a Router

2. Device Activation and Login

For the first-time access, you need to activate the camera by setting the admin password. No operation is allowed until the activation is done. You can activate the camera via a supported web browser, an NVR or the Homaxi Tool.

2.1. Activate Via a Web Browser

Before You Start

- The camera should be configured correctly and powered on.
- The network connection between the PC and the camera should be functioning normally.
- The IP address of the PC should be configured under the same network segment as the camera.
- The PC and web browser being used should meets the requirement.

Steps:

1. Open the web browser.

2. Enter the IP address of the camera in the address bar to open up the login page.

🕑 Note

 Previewing more channels or videos with higher resolutions concurrently requires higher specifications. The default IP address of the camera is 192.168.1.10, while the IP address of your PC should be 192.169.1.x.
 If you don't know the IP address of the camera, you can use the Device Manager to obtain it. Please refer to the Device Manager User Manual.

3. Input Password and Confirm.

User Name	admin	
Password		
Confirm		
	ters allowed te following types are required: upper-ca case letters, digits, and special characters <<>/:])	

Figure 2-1 Activation

🕂 Warning

Strong Password is recommended. We highly recommend you create a strong password of your own choosing (8-16 characters allowed, including at least 2 of the following categories: upper case letters, lower case letters, digits, and special characters.) to increase the security of your product. And we recommend you reset your password regularly, especially in the high standard security system, resetting the password monthly or weekly can provide a better protection to your products.

4. Reset Type Settings. You can choose email or security questions at least one way or all.

lease configure o	ne password reset method at least.	
Reserved Email		?
Security problem r	node	
Question-1	What is your father's name?	
nswer-		
Juestion-2	What is your mother's name?	
Answer-		
Question-3	What is the name of your high school head te	
Answer-		

Figure 2-2 Reset Type settings

2.2. Login

The following login procedure is exemplified base on Microsoft Edge.

1. Open up the login page by entering the correct IP address of your camera in the address bar.

2. Enter your username and password, and then click Login.

3. If you log in with Save Password checked, you will not need to enter your password from the next login. To ensure security, we don't recommend using this feature.

4. After login, the camera live view will be displayed by default.

2.3. Install Plug-ins

If you are logging in for the first time, Please Click the '**Download**' to download the browser plug-ins (**vLocalServerSetup.exe**).

1. Click in the following order: "**Downloads-Keep-Show more-Keep anyway**". The installer of the plug-in named vLocalServerSetup.exe will be downloaded. Double click on the installer to install the plug-in. You need to refresh your browser to complete the installation.

(English 💌			4	Make sure you trust vLocalServerSetup.exe before you open it
A admin	Downloads			Microsoft Defender SmartScreen couldn't verify if this file is safe because it isn't commonly downloaded. Make sure you trust the file you're downloading or its source before you open it. Name: vLocalServerSetup.exe Publisher: Unknown
Download Save	vlocalServerSetup. sure you trust vloc See more	exe isn't commonly alServerSetup.exe b Delete Keep		Show less . A
forget password		Report this file as safe Learn more		Report this app as safe Learn more Delete Cancel

Figure 2-3 Download

🕑 Note

When installing the vLocalServerSetup.exe, a notification may pop up on your PC. Please click **More info** and **Run anyway** to install it.

1. Install vLocalServerSetup.exe.

Setup - vLocalServer		2	-	×
Select Destination Locatio	n			
Where should vLocalServer	be installed?			Ċ
Setup will install vL	ocalServer into the follow	wing folder.		
To continue, click Next. If y	ou would like to select a	different folder, did	k Browse.	
C:\vLocalServerSetup			Browse.	
At least 43.2 MB of free dis	k space is required.			
		Next >		Cancel
		Nevt>		Cance

Figure 2-4 Select folder to install

Setup - vLocalServer		(<u>***</u>)
Ready to Install				
Setup is now ready to begin installing vLocalServer	on your computer.		Ć	A.
Click Install to continue with the installation, or click change any settings.	Back if you want t	o revie	w or	
Destination location: D:\vLocalServerSetup			^	
<			~	
<	Back Insta	ill	Cano	cel

Figure 2-5 Install

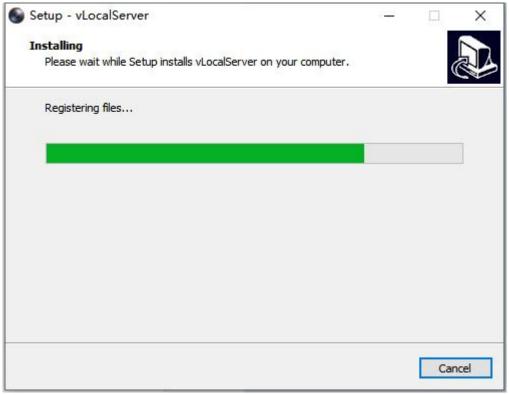


Figure 2-6 Installing



Figure 2-7 Finish

3. Live View

This chapter mainly introduces the parameters of live view, corresponding function of each icons and PTZ settings.

3.1. Introduction of Live View

By default the live view window is displayed when you are logged in to the Web interface, as shown in the following picture.

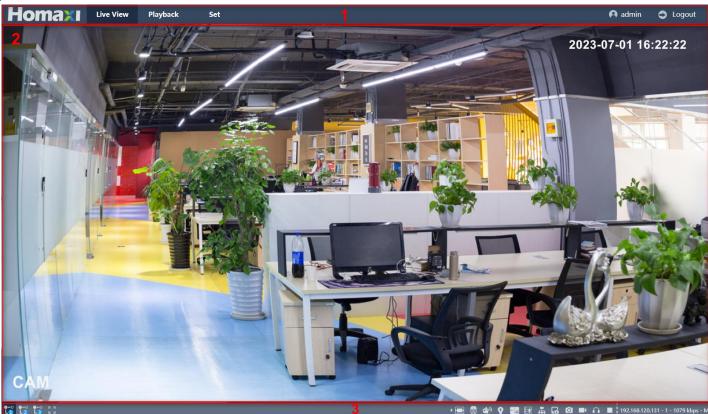


Figure 3-1 Live View

No.	Items	Description
1	Menu	You can navigate between Live View, Playback, Set and Account pages in this area.
2	Preview window	The Live video will be displayed in this area.
3	Toolbar	You can adjust the size of the live view window, set stream type; You can also perform operations such as start/stop live view, capture, record, audio on/off, etc.

Table 3-1 Live View

Button	Description
₽-0 L 1	Live viewing the main stream
₽-° L 2	Live viewing the sub stream
e-o L 3	Live viewing the third stream

不 3	Full screen
	Self-adaptive screen size
4:3	Set the aspect ratio of the live view screen to 4:3
16:9	Set aspect ratio of the live view screen to 16:9
1X	Set the aspect ratio of the live view screen in accordance with the video source
	Electronic zoom on/off
2	Siren on
0	Warming light on
	Dynamic Tracking Open/Close
	Talk
	Multicast (require supporting routers)
G	Device Snapshot
Ø	Local Snapshot
	Local Record
•	Audio
	Start/Stop live view
192.168.120.114 - 1 - 2708 kbps - M	Device IP address – Channel No.– Real-time Bitrate Stream type(Main, Sub or Third)

Table 3-2 Live View Button Description

P Note

The buttons may vary depending on camera models.

3.2. Start and Stop Live View

Click Live View. Click 🔝 to start live view. Click 🔲 to stop live view.

3.3. Full Screen Preview

This function is used to access full screen preview mode.

Steps:

- 1. Click Live View.


2. Go to toolbar click to access the full screen preview mode.

3. Use Esc button to quit the full screen preview mode.

3.4. Adjust Aspect Ratio

Steps:

1. Click Live View.

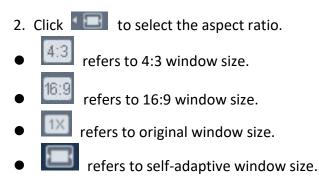

3.5. Preview Stream Type

This function is used to select the Preview stream type according to your needs. For the detailed information about the stream type information, please refer to Stream Type.

Steps:

- 1. Click Live View.
- 2. Go to toolbar click
- I refers to Main Stream.
 - refers to Sub Stream.
- Los refers to 3rd Stream.

3.6. Manually triggered sound alerts

Steps:

1. Click Live View.

2. Click to manually activate the camera's siren sound once. Our device supports switching alarm content, please refer to **6.3 Alarm Audio** for Red and blue lights setting details.

3.7. Manually triggered light alerts

Steps:

1. Click Live View.

2. Click to manually activate the camera's warming light on. Red and blue lights setting please refer to **6.3 Alarm Audio**.

3.8. Dynamic Tracking lines and Smart Rules

This function is used to display the dynamic tracking lines and smart rules in preview For the detail information about the smart rules, please refer to **7.4 Smart Event** for details.

Steps:

Click



to enable/disable the dynamic tracking lines and smart rules in preview.

3.9. Multicast View

This function is used to enable the multicast view. For the detail information about the Multicast, please refer to **5.3.12 Multicast**.


Steps:

Click 🛄 to open the multicast view.

3.10. Recording Videos and Capturing Pictures Manually

This function is used to capture the picture and record videos from the Live View manually.

Steps:

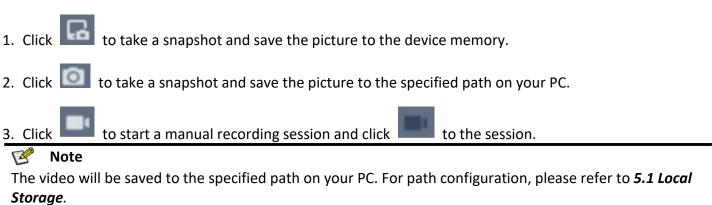

3.11. Audio and Talk to the Device

Steps:

Click is to enable the audio. You shall hear the sound from the microphone on the camera.
 Click is to talk to the device. The speaker on the camera will play the sound from the microphone on your end.
 Note This feature is only supported on cameras with the Mic or speaker.

4. Configuration

4.1. Local Storage

You can specify the path for saving the record files, snapshot pictures on your PC by performing the following steps.

Go to Set → Local Storage.

• Record video

Record size: Set the maximum package size of the record file. Available options are **256MB**, **512 MB**, **1 GB**. **Record Path**: Specify the path for saving the videos recorded manually from the Live View mode. You can click **Browse** and select a folder as the storage path.

Remote Path: Specify the path for saving the videos recorded manually or downloaded from the Playback mode. You can click **Browse** and select a folder as the storage path.

Recorded Video				
Record Size	256MB	512MB	🗆 1G	В
Record File Size	C:\Use	lecordPath,	Browse	Open
Save Downloaded Files to	C:\Use	Remunited Partici	Browse	Open

Figure 4-1 Recorded Video

• Snapshot

Picture Path: Specify the path for saving the snapshots taken manually from the Live View mode. You can click **Browse** to select a folder as the storage path.

Picture Path: Specify the path for saving the snapshots taken manually from the Playback mode. You can click **Browse** to select a folder as the storage path.

ave Snapshots in Live	C:\Users	SnapPath\	Browse	Open
ave Snap <mark>s</mark> hots when Pl	C:\Users	PicturePath\	Browse	Open

4.2. System Parameters

In this section, you can configure the device system parameters.

4.2.1. Check Device Information

In this page you can view the device information such as firmware version, MAC address, model, etc. **Steps:**

	ve View Playback S	et
LocalStorage System Settings	ltem	Information
Basic Info	MAC Record Channel	00:6f: 6
 Base Time & DST 	Audio Port I/O	1/1
 Account Network 	Alarm Port I/O	1/1
Image	System	V500.R
Video/Audio Event	Release Date	20:
Storage	Web Version	V7
🛠 Maintain	Plugin Version	vLc
	Update Firmware Version	This is the latest version!
	Refresh	
	Figure 4-3	System Settings

Go to Set → System-Settings, you will see the device information.

🕑 Note

When you see "New version available!" on the interface, it is recommended you manually to download the new software and update it.

4.2.2. Set Device Language, Video Format & Host Name

You can perform the following steps to set Device Language, Video Format and Host Name. **Steps:**

Go to Set → System Settings → Base.

- Language: Click *m*, and select the language you want to set. Click **Save** to save the settings.
- Video standard: Click , and select the video format (PAL / NTSC). Click Save to save the settings.
- Host name: You can edit the Host name as you want. Click **Save** to save the settings.

🕑 Note

The host name will show on Network and when using the Email function. For the detail of email function, please refer to **4.3.7 Email.**

4.2.3. Time and Date

You can perform the following steps to set Device time, time format, DST, etc.

• Set Manually or Sync with PC

Steps:

1. Go to Set \rightarrow System Settings \rightarrow Time & DST.

Time Zone	[GMT+08:00]Beijing,Urumqi,Singapore	Auto Sync PC ti
System Time	06/27/2023 11:44:50 AM	SyncPC
Date Format	mm dd yyyy	
Date Separator	/	
Time Format	24-Hours	

Figure 4-4 Time

- 2. Set the correct time zone and system time.
- 3. Optional: Click SyncPC to synchronize the time settings of your camera with your PC.
- 4. Set the date and time format.
- 5. Click Save.
- Set DST (Daylight Saving Time)

Support to auto-change the device time. **Steps**:

1. Go to Set \rightarrow System Settings \rightarrow Time & DST.

DST	Day of Wee	ek C	Date			
Start	Mar 💌	Last		Sun. 🔻	01 💌	00 🕶
End	Oct 💌	Last		Sun. 🔻	01 🔻	00 🔻

Figure 4-5 DST

- 2. Enable **DST**.
- 3. Choose the DST format Day of Week or Date.
- 4. Set the start date and end date.

5. Click Save.

• Set NTP

Device time will be synchronize with the NTP server.

Steps:

1. Go to Set \rightarrow System Settings \rightarrow Time & DST.

NTP	Enable	
Host IP	time.nist.gov	
Port	123	
Update Time	10	min



2. Enable NTP.

- 3. Set Host IP (NTP Server).
- 4. Set the **Port** number.
- 5. Set the **Update Time**. The device will synchronize the time with NTP server at this interval.
- 6. Click Save.

4.2.4. User and Account Manage

You can add/delete user, modify password, block IP in this section.

• Create group and user account

Steps:

1. Go to Set → System Settings → Account.

No.	Group	User Name	Edit	Modify Password	Delete User
1	admin	admin(Reuseable)	Ľ	⋳	×
2	user				
1					
Add Group	Add User	Modify group	Delete Group	Set/change s	Set/Change S
		Figure 4-7	Account		

- 1. Click **Add Group** to create a new group, set the group name and authority, click **OK**.
- 2. Click Add User to create new user, set the user name, password, group and authority, click OK.

• Set/Change security mailbox

Steps:

- 1. Go to Set \rightarrow System Settings \rightarrow Account.
- 2. Select the user you want to modify.
- 3. Click Set/Change secure mailbox.
- 4. Enter a New security email address and the user's password.

🕑 Note

After the forgotten password is used for the security mailbox, the password is retrieved. Please make sure that the mailbox is available and carefully write it in mind.

5. Click change and wait for the prompt "Modify successfully".

Secure mailbox settings	
Original security email address	
f***@****4	
New secure email address	
Password	
Message: After the forgotten password is used for the mailbox, the password is retrieved. Please make sure tha available and carefully write it in mind	-
change Cancel	

Figure 4-8 Set/Change security mailbox

- Set/Change security issue Steps:
- 1. Go to Set \rightarrow System Settings \rightarrow Account.
- 2. Select the user you want to modify.
- 3. Click Set/Change security Issue.
- 4. Select the question and enter the answer, enter the user's password.
- 5. Click change and wait for the prompt "Modify successfully".

Security Issue	Settings
Question-1	What is your father's name?
Answer-1	
Question-2	What is your mother's name? 🔻
Answer-2	
Question-3	What is the name of your high set
Answer-3	
Password	
chang	ge Cancel

Figure 4-9 Set/Change security iSSUE

• Modify user password

Steps:

- 1. Go to Set → System Settings → Account.
- 2. Select the user whose password you want to modify.
- 3. Click Modify Password 🍈 , input the Old Password, New password and Confirm password.

	Modify	Password	
User Name	admin		
Old Password			
New Password			
Confirm			
Sa	ve	Cancel	

Figure 4-10 Modify Password

- 4. Click **Save** to modify the password.
- Modify username and authority

Steps:

- 1. Go to Set \rightarrow System Settings \rightarrow Account.
- 2. Select the user whose information you want to modify.
- 3. Click **1** You can modify the username, and the authority of the user as you want.
- 4. Click **OK**.
- Delete User

Steps:

- 1. Go to Set \rightarrow System Settings \rightarrow Account.
- 2. Click the **Delete User** button (\times) after the user need to be deleted.
- 3. Enter the username into the popup dialog window to confirm.
- 4. Click OK.
- IP Block

You can add and delete IP addresses to and from the blacklist. Blocked IP addresses will not be permitted to access the device.

Steps:

1. Go to Set \rightarrow System Settings \rightarrow Account \rightarrow Access Control.

2. Under Restriction Type, select **Blocked Sites**.

3. Enter the IP address you would like to block in the input box and click **Add IP**. This IP address will be added to the blacklist.

Optional: If you need to remove an IP address from the blacklist, you can select the IP address and click **Delete IP**.

 Restricted Type
 Blocked Sites

 No.
 IP Blocked

 No.
 IP Blocked

 Save
 Refresh

4. Click Save.

Figure 4-11 Access Control

• IP Trust

You can add IP addresses to the whitelist. IP addresses not included in the whitelist will not be permitted to access the device.

Steps:

- 1. Go to Set → System Settings → Account → Access Control.
- 2. Under Restricted Type, select Trusted Sites.

3. Enter the IP address you would like to add to the whitelist and click **Add IP**. This IP address will be added to the whitelist.

Optional: If you need to remove an IP address from the whitelist, you can select the IP address and click **Delete IP**.

4. Click Save.

Restricted Type	Trusted	Sites	•	Add IP
No.		IP	Allowed	And a second
Save	Refresh	Delete	IP	
	Fi	gure 4-12 Acc	ess Control	

• View Online Users

You can view the list of current online users in this section.

Steps:

1. Go to **Set** → **System Settings** → **Account** → **Online Users**.

The information (Username, IP address, Login Way and Login Time) of the users online would be displayed as the following picture.

No.	User Name	IP address	Login Way	Login Time
1	admin	192.168.120.11	XVR	2023-01-04 13:55:39
] 2	admin	192.168.120.41	Web	2023-01-04 01:21:19
3	admin	192.168.120.7	Web	2023-01-04 01:20:17
4	admin	192.168.120.9	XVR	2023-01-04 14:00:49
Disconnect	Block 6	0 Sec 0~(55535	Refresh

Figure 4-13 Online Users

Optional: If you need to disconnect a user from the device, you can select the user and click the **Disconnect** button. The selected user will be disconnected from the device instantly.

If you need to block an IP address of an online user from logging in, you can select the user from the online users list, enter a block duration, and click the **Block** button. IP addresses blocked by this method will not have the access to the device for the set duration.

4.3. Network Configuration

🕑 Note

Network Configuration page may vary depending on the model. Please be subject to the actual web interface.

4.3.1. Configure Device TCP/IP Settings

TCP/IP settings must be configured properly before you operate the device over a network.

• NIC Type

Setting Adaptive as default is recommended.

• DHCP

By enabling DHCP, the device will automatically obtain an IP address and other network configurations (subnet mask, default gateway) from the DHCP server. Please note that the IP address of the device might be changed by enabling this feature.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow TCP/IP.
- 2. Enable DHCP.
- 3. Click Save.

NIC Type	Adaptive 🔻	DHCP(IPV4)
IP Address	192.168.120.250	
MAC	00:04:56:ab:de:79	IP conflict
Subnet Mask	255.255.255.0	
Default Gateway	192.168.120.1	

Figure 4-14 TCP/IP

Manual Configuration

You can configure the network of the device manually. Input device IP Address, IP Subnet Mask, and Gateway, and click IP conflict to test check if the IP address is available. **Steps:**

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow TCP/IP.
- 2. Confirm that **DHCP** is disabled.
- 3. Enter IP address, Sub Net Mask, and Default Gateway.
- 4. Click the IP conflict button to check if there is an IP conflict.
- 5. Click Save.
- DNS Server

DNS is the abbreviation for domain name server. A DNS server is requisite if you want to access a site from the device through a domain name. It is also required for some features (e.g., sending emails, cloud storage). You need to configure **Preferred DNS Server** and **Alternate DNS Server** properly if you need to utilize these features.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow TCP/IP.
- 2. Enter in **Preferred DNS** Server and Alternate DNS Server.
- 3. Click Save.

• Transfer Mode

You can specify the Transfer Mode as self-adaptive, fluency preferred or quality preferred.

Transfer Mode 10M/100M Self-adaptive

Figure 4-15 Transfer Mode

• Max Users

You can set the maximum number of IP addresses connected concurrently to the device.

• Ports

You can configure the ports of HTTP, HTTPS, Media, RTSP, RTMP in this section.

HTTP port	80	
HTTPS Port	443	
Media port	34567	
RTSP port	554	
RTMP port	1936	Enable
	Figure 4-16 Ports	

• URL Templates

This section provides templates for RTMP and RTSP URLs, you can use them after modifications according to your specific situation.

rtmp://[IP]:[PORT]/[Optional:stream?]mode=real&idc=[*]&ids=[*]
rtsp://[IP]:[PORT]/[Optional:stream?]mode=real&idc=[*]&ids=[*]

Figure 4-17 URL Templates

4.3.2. Configure DDNS Settings

Support use the Dynamic DNS (DDNS) for network access.

DDNS is the abbreviation of Dynamic DNS, it maps the dynamically allocated IP address of the device to a static domain name that can be accessed by the external network.

Steps:

1. Go to Set \rightarrow Network \rightarrow General \rightarrow DDNS.

- 2. Check the Enable checkbox.
- 3. Select your DDNS provider under DDNS Type, enter your Domain Name, Username, and Password.

4. Click Save.

🕑 Note

Our devices support multiple DDNS providers, such as Oray DDNS, CN99 DDNS, DynDNS DDNS, and NO-IP DDNS. You need to register an account before using. The following table includes the websites of our supported DDNS providers for your reference.

DDNS type	Website
Oray	http://www.oray.com/
DynDNS	http://dyn.com/dns/
NOIP	https://www.noip.com/
CN99	http://www.pubyun.com/

Table 4-1 DDNS Provider Websites

4.3.3. Configure NAT Settings

NAT is the abbreviation for Network Address Translation, it maps addresses and ports between your internal network and external network. You can configure the UPnP[™] settings in this section.

Universal Plug and Play (UPnP[™]) is a networking architecture that provides compatibility among networking equipment, software, and other hardware devices. The UPnP protocol allows devices to connect seamlessly and to simplify the implementation of networks in the home and in corporate environments.

By enabling this feature, you will not need to configure the port mapping for each port manually. The camera will be connected to the Wide Area Network via the router automatically.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow NAT.
- 2. Click Enable.

3. Click Save.

```
🕑 Note
```

To ensure this feature can properly function, please make sure the UPnP feature on your router is enabled.

4.3.4. UPNP-TM

By enabling this feature, your network camera can be found as a network device on your network. **Steps:**

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow UPNP-TM.
- 2. Click Enable and enter the device name as you want.
- 3. Click Save to save changes.

4.3.5. Cloud

After enable the Cloud. Support user to access the device (image, alarm and so on) via APP, IE Web.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow General \rightarrow P2P.
- 2. Click Enable.
- 3. Click Save.

Click the **Refresh** button to reload the page. Your device is connected to the Cloud when **Status** changed to **Connected**.

• Access the device via APP Steps:

- 1. Ensure the device connected with Cloud.
- 2. Scan the iPhone/Android QR code to download the APP.
- 3. Scan the Cloud ID QR code to bind the device and access the device.

🕑 Note

You can download our **Homaxi View** App by scanning the QR code on the page corresponding to your platform. To bind your cameras for later access, scan the Cloud ID QR code on the right. Note that you will be required to register an account prior to using **Homaxi View**.

• Access the device via web

Steps:

- 1. Ensure the device connected with Cloud.
- 2. Open your browser, enter the URL displayed by **IE Web** in the URL bar.

and accurate		
Status: Online		Cloud:
in the second se		N. 10
IE W : http	.com	Verific:

Figure 4-18 IE Web

3. Switch to **By device**, input **Cloud ID Device username** and **Device password**.

		English 🔹	
	By user	By device	
0	Cloud ID		
8	Device username		
Ð	Device password		
Forget	t Password	Save Password	
	Login	Register	

Figure 4-19 By device

4. Click Login.

4.3.6. FTP (File Transfer Protocol)

FTP is the abbreviation for File Transfer Protocol, which is quintessentially designed for file transferring. In this section, you can configure FTP server related settings to enable the uploading of the captured pictures or recorded videos to the FTP server. The uploading process can be triggered by events or timed snapshot tasks.

Steps:

- 1. Go to Set → Network → Advanced → FTP.
- 2. Select **Type**: Record FTP/Picture FTP.
- 3. Check Enable checkbox.
- 4. Enter the IP address in the **Server** input box and **Port** to your FTP Server.
- 5. Configure the FTP settings: enter the username and password required for logging into the FTP server.
- 6. Specify the directory and the file length for uploading.
- **Directory**: Device will create a new folder on your FTP if specified directory doesn't exist.

File length: Recorded videos will be segmented into files with size that is not larger than the specified file length (Max. 65535 MB).

- 7. Click FTP Test to test the connection to your FTP server.
- 8. Set the **FTP Schedule**.

Channel	1-Network	*		
Week Day	Sun.	Ŧ	Standard	Event
Schedule1	00:00:00	23:59:59		
Schedule2	00:00:00	23:59:59		

Figure 4-20 FTP Schedule

9. Click Save to save and finish the settings.

🕑 Note

To anonymously access (access without authentication) the FTP Server, check the **Anonymous** checkbox. Note that the anonymous access feature must be supported by the FTP server.

4.3.7. Email

The device can send Email notifications to all designated receivers when an alarm event (e.g., motion detection event, video loss, video tampering, etc.) is detected.

Before you start:

Please make sure the TCP/IP Settings has been configured properly.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow Advanced \rightarrow Email.
- 2. Configure the following settings:

SMTP Server: The IP address or the domain name (e.g., smtp.263xmail.com) of the SMTP Server. **Email Encryption**: None or SSL. When SSL is selected, emails will be sent after SSL encryption.

Port: The SMTP port. The default SMTP port is 25 (not secured) and the default SSL SMTP port is 465. **Snap Interval time**: The time interval of snapshots.

Username: The email account of the sender.

Password: The password to the email account.

Sender: The name of the email sender.

Subject: The subject of emails. **Receiver 1/2/3**: The email addresses of the receivers of the emails.

- 3. Click **Mail Test** to test whether the settings are configured properly.
- 4. Click the **Mail Test** to test whether the settings are configured properly.

쭏 Note

You can check with your email service provider for the SMTP settings.

4.3.8. SNMP

By enabling the SNMP feature, you can obtain the camera status, configurations, and alarm-related information. You can also manage the camera remotely when it is connected to the network. **Before you start**:

Prior to configuring SNMP, please download the SNMP client and make sure you can receive information from camera via a SNMP port. Trap is the terminology in SNMP for a message sent from one device to another to notify a specific event. By setting the **Trap Address** (the IP address of the trap receiver), the camera can send alarm events and exception messages to the surveillance center.

🕑 Note

The SNMP version you select should be the same as that of the SNMP client. You need to select from different versions according to the security level you required: SNMP v1 provides no security; SNMP v2 requires authentication for the access; SNMP v3 provides encryption and prior to using SNMP v3, HTTPS protocol must be enabled.

Steps:

1. Go to Set \rightarrow Network \rightarrow Advanced \rightarrow SNMP.

2. Check the checkbox of Enable SNMPv1, Enable SNMP v2c, Enable SNMPv3 to enable the feature correspondingly.

- 3. Configure the **SNMP settings**.
- 4. Click Save.

🕑 Note

For a lower risk of information leakage, SNMP v3 is highly recommended instead of SNMP v1 or v2.

SNMP v1/v2		
Enable SNMPv1	Enable SNMPv2	
Read Community	public	
Write Community	private	
Trap Address	127.0.0.1	
Frap Port	162	
Trap Community Name	public	

SNMP v3	Enable SNM	Pv3	
Read Security Name	public		
Security Level	no auth_no priv		•
Authentication Algorithm	MD5	◯ SHA	
Authentication Password			
Private-key Algorithm	DES		
Private-key Password			
Write Security Name	private		
Security Level	no auth_no priv		•
Authentication Algorithm	MD5	◯ SHA	
Authentication Password			
Private-key Algorithm	DES	O AES	
Private-key Password			
SNMP Port	161		

Figure 4-21 SNMP Settings

4.3.9. HTTPS

HTTPS supplies authentication of the website and its associated web server, which protects you against Man-inthe-middle attacks.

Before you start:

Make sure HTTPS Port is configured properly in **Geneal** \rightarrow **TCP/IP** section before you enable the HTTPS feature on a device. For example, if the port number is set to 443 and the IP address is 192.168.1.64, you may access the device by entering https://192.168.1.64:443 in the address bar of a supported web browser.

Steps:

1. Go to Set → Network → Advanced → Https.

2. Check the **Enable** checkbox.

Installed Certificates	C=CN,ST=,L=,O=,OU=,H/IP=eziotest,EM= Download Delete				
	Owner C=CN,ST=,L=,O=,OU=,H/IP=eziotest,EM=				
ATTR	Issuer C=CN,ST=,L=,O=,OU=,H/IP=eziotest,EM=				
	Validity period 2023-06-01 20:53:27 ~ 2023-06-01 20:53:27				

Figure 4-22 HTTPS

- 3. You need to **Download** the certificate and install it on your PC before visit the device via HTTPS.
- 4. Click Save to save changes.
- 5. The device will reboot to apply the settings.

🕑 Note

If the HTTPS feature is enabled but the certificate has not been installed on your PC, a notification about 'the certificate of this site has an issue' will be displayed when accessing the device web page.

4.3.10 Multicast

In computer networking, multicast (one-to-many or many-to-many distribution) is group communication where data transmission is addressed to a group of destination computers simultaneously.

When multiple servers ask for the same information, the source device only needs to send the information only once. Hence, the most important benefit of the multicast is saving transmission bandwidth when the device is accessed by multiple remote clients.

Before you start:

Please confirm the router to which the device is connected supports Multicast feature.

Steps:

- 1. Go to Set \rightarrow Network \rightarrow Advanced \rightarrow Multicast.
- 2. Set the Multicast IP (224.0.0.0~239.255.255.255) and port (1025~65534).
- 3. Click Save to save changes.

🕑 Note

The Image Configuration page may vary depending on the model. Please be subject to the actual web interface.

5.1. Schedule Image Setting

You can select image mode amongst three options: **Auto Switch**, **Scheduled Switch** and **Universal Day And Night**.

- Universal Day And Night: The same configurations of the image will be applied to both day and night modes.
- Schedule Switch: You can configure image parameters for Daytime and Night modes individually. You need to set up a schedule for shifting between Daytime and Night modes if you select this option.
- Auto Switch: You can configure image parameters for Daytime and Night modes individually, and the device will switch the Daytime Night image parameters synchronize with the day/night mode.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click the Image Mode drop-down box to select a mode.

5.2. Image Adjust

- **Brightness:** Specifies the brightness/luminance of the image. The parameter ranges from 0 to 100 with a default value of 50.
- **Contrast**: Specifies the ratio of tones or the ratio between the light and dark areas of an image. The parameter ranges from 0 to 100 with a default value of 50.
- **Saturation**: Specifies the colorfulness of the image. The parameter ranges from 0 to 100 with a default value of 50.
- **Hue**: Defines the quality of the color by its dominant wavelength. The parameter ranges from 0 to 100 with a default value is 50.
- **Sharpness**: Specifies the contrast of edges in the image. The parameter ranges from 0 to 100 with a default value of 50.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click Image Configuration and set the parameters by sliding on the seek bars for each parameter.

5.3. Exposure

You can select the correct exposure mode to achieve the desired exposure effect.

• Anti-Flicker: Outdoor/50Hz/60Hz anti-flickering modes are supported. You can select depending on the environment.

Note: 50Hz/60Hz: Reduces stripes by limiting shutter frequency.

• Exposure mode: Auto/Manual.

Auto: the camera will auto-adjust the exposure time according to the environment.

Exposure time: Refers to the shutter time of the electronic shutter. 1/3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/12, 1/15, 1/25, 1/30, 1/50, 1/60, 1/100, 1/120, 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000 are selectable. You can adjust according to the actual luminance condition.

Note: Exposure time is used to control the light that comes into the lens. A fast shutter speed is ideal for scenes in quick motion. A slow shutter speed is ideal for scenes that change slowly.

• **Gain**: Control image signals so that the camera outputs standard video signals according to the light condition. To compensate the sensitivity of the sensor, the default value is 50. The bigger the value is, the brighter would the image be, and the noise would also be amplified to a larger extent.

Note: You can configure Gain parameter only when Exposure Mode is set to Auto. Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click **Exposure** and set the parameters.

5.4. Backlight

🕑 Note

Only one of the features can be enabled at the same time.

- Highlight Compensation: This feature should be enabled when there is a bright light in the view.
 You can adjust Highlight Compensation parameter only when it's enabled. The parameter ranges from 0 to 100. Bigger the number is stronger the effect takes.
- **Backlight:** This feature of compensates light to an object in the front to make it clearer. You can select amongst Close, Default and Custom.
- WDR/DWDR: (Digital) Wide Dynamic Range can be enabled when there is a sharp contrast between the bright area and the dark area of the scene. You can configure the parameter (limit) of WDR/DWDR feature only when it's enabled. Bigger the parameter is, wider the dynamic range is.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click **Backlight** and configure the parameters.

5.5. White Balance

White balance is the white rendition function of the camera, and it's used to adjust the color temperature according to the environment.

Auto Mode: Camera will adjust the color temperature according to the environment automatically.

Manual Mode: User can set the R (red) gain and the B(blue) gain manually.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click White balance and set the parameters.

5.6. Day and Night Mode Switch

 Day/Night Switch: You can select the Day/Night Switch mode according to different surveillance demand. Daytime, Night, Auto are selectable for day/night switch.
 Daytime: The samera will stavin the day (seler) mode.

Daytime: The camera will stay in the day (color) mode.

Night: The camera will stay in the night (black and white) mode.

Auto: The camera outputs the optimum images according to the luminance condition. In this mode, the camera can switch between night mode and day mode automatically.

- Filter time: Refers to the interval time between the day/night switch range from 5-120s.
- Fill type: Support the select the Infrared Lamp. You can set it to Close, Auto and Manual mode. Close: the Infrared lamp will not on;

Auto: when the environment brightness is lower, the Infrared lamp will on and auto-adjust the lamp brightness to get the best image;

Manual: when the environment brightness is lower, the Infrared lamp will on and the lamp brightness will be the highest.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click **Day/Night Switch**, and set the parameters.

5.7. Illuminator

Note Only certain device models support the function.

Steps:

- 1. Go to Set \rightarrow Image \rightarrow Image Configuration.
- 2. Click Illuminator, and set the parameters.
- Fill light: There are four options: IR Mode, Warm Light Mode, Smart illumination and Schedule. Schedule and Setting buttons are only displayed when Schedule mode is selected, click the Setting button to pop up the Lighting Plan schedule, as shown in the figure below.

In this screen you can set the lighting plan for different lighting modes. The green one is Smart illumination mode, the orange one is Warm Light mode, the Blue one is Infrared Lamp.

	Illumination Plan	
Smart Illumination	📕 🔿 Warm Light Mode 🛛 🗧 🔿 IR Mode	
0,1,2,3,4,5,6	7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	3 24
	Sun.	
0 1 2 3 4 5 6		3 24
	Mon.	
0,1,2,3,4,5,6	7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 Tue.	24
0,1,2,3,4,5,6,		3 24
0,1,2,3,4,5,6,	7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 Wed.	1
0,1,2,3,4,5,6,	7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	3 24
	Thu.	
0 1 2 3 4 5 6	7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	3 24
	Fri.	
0 1 2 3 4 5 6		3 24
	Sat.	
	OK	

Figure 5-1 Illumination Plan

• IR Setting:

Fill Light Mode: It is used to control the camera's infrared lighting physical switch, independent of **Fill Light** selection. There are three options: **Close**, **Manual and Auto**, default is Manual.

Close: Close the infrared light of the camera;

🕑 Note

When you need to use the camera's infrared light function, please do not set **Fill Light Mode** to Close.

Manual: In this mode, the infrared light is at its brightest.

Auto: Adjust the IR brightness automatically. When auto mode is selected, the Smart IR is on. Smart IR can adjust the IR automatically according to the image brightness. When the object is very close to the camera, the IR will be too bright for the object and it will be totally white to see the details. So Smart IR will adjust the output of IR brightness so that the object would not be so white and missing details.

Warm Light Setting:

Fill Light Mode: It is used to control the camera's warm light physical switch, independent of **Fill Light** selection. There are three options: **Close**, **Manual and Auto**, default is Auto.

Close: Close the warm light of the camera;

🕑 Note

When you need to use the camera's warm light function, please do not set **Fill Light Mode** to Close.

Manual: When switching to manual mode, the Brightness Upper Limit item appears, with an adjustment range of 0-100 and the default of 50;

Auto: When switching to auto mode, the Brightness Upper Limit item appears, with an adjustment range of 1-100 and the default of 100.

Illuminator Delay: With an adjustment range of 10 ~ 300, default 30 sec.

5.8. Enhancement

The device supports Noise Reduction and Defog features to enhance the camera image quality. You can adjust the NR Level to configure the intensity of Noise Reduction. Note that this feature may result in a blurry image.

You can enable the Defog feature to adjust the clarity of images captured in foggy or hazy conditions.

- **NR Level**: Noise Reduction Level, ranges from 0 to 6, the higher the value, the less noisy the video.
- **Defog**: You can enable the Defog feature when the environment is foggy and the image is misty. It enhances subtle details so that the image appears more clearly.

Steps:

1. Go to Set \rightarrow Image \rightarrow Image Configuration.

2. Click Enhancement and set the parameters.

5.9. Privacy Mask

On certain occasions, you may need to set a masked area on the camera image to protect privacy. For example, the keyboard of an ATM machine. When a PTZ camera changes its position or zooms, you should make manual adjustment to the Privacy Mask accordingly to protect the area all along. **Steps**:

- 1. Go to Set → Image → Privacy Mask.
- 2. Check the Enable checkbox.

3. Left click the mouse on the preview on the left and drag to draw a masked area (up to 4 areas).

Optional:

Move a mask area: Left click the mouse on a masked area and then drag it to the destination position. **Delete a mask area**: Left click the mouse on a masked area and then click Delete. You can also click Clear id you want to delete all masked areas.

4. Click Save.

6. Video and Audio Configuration

This part introduces the configuration of video and audio related parameters.

📝 Note

The Video/Audio configurations may vary depending on the model. Please be subject to the actual web interface.

6.1. Video Settings

This part introduces the configurations of video parameters such as stream type, video encoding, and resolution. To configure, go to Set \rightarrow Video/Audio \rightarrow Video Settings.

6.1.1. Stream Type

For devices that supports more than one stream, you can specify the type for each stream.

Main Stream

This stream type stands for the stream of the best quality that the device supports. It usually provides the best resolution and the highest frame rate that the device supports. But high resolution and frame rate usually requires a larger storage space and a higher transmission bandwidth.

• Sub Stream

The stream usually offers comparatively low-resolution images, which consumes less bandwidth and storage space.

Mobile Stream

The stream usually used for mobile APP preview, which consumes smallest bandwidth and storage space.

Steps:

- 1. Go to Set \rightarrow Video/Audio.
- 2. Click Video Settings, Stream type and select the Stream you want to configure.

6.1.2. Video Encode

It stands for the compression standard the device adopts for video encoding.

• H.264

H.264, also known as MPEG-4 Part 10 and Advanced Video Coding (AVC), is a compression standard. Without losing too much image quality, it increases compression ratio and reduces the size of video file (in comparison to MJPEG or MPEG-4 Part 2 standards).

• H.264+

H.264+ is an improved compression coding technology based on H.264. By enabling H.264+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.264, H.264+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

• H.265

H.265, also known as High Efficiency Video Coding (HEVC) and MPEG-H Part 2, is a compression standard. In comparison to H.264, it offers better video compression at the same resolution frame rate and image quality.

• H.265+

H.265+ is an improved compression coding technology based on H.265. By enabling H.265+, you can estimate the HDD consumption by its maximum average bitrate. Compared to H.265, H.265+ reduces storage by up to 50% with the same maximum bitrate in most scenes. **Steps**:

1. Go to Set → Video/Audio → Video Settings.

- 2. Go to **Compression** to select the H.264/H.265.
- 3. Check the Encode Enable checkbox to enable H.264+/H.265+.
- 4. Click Save.

6.1.3. Complexity level

You can select the encode complexity level for your device: Baseline/Main Profile/High Profile. The higher complexity level, the smaller video stream code. (Selectable options may vary depending on the model) **Steps**:

- 1. Go to Set → Video/Audio → Video Settings → Complexity level.
- 2. Select amongst Baseline/Main Profile/High Profile.
- 3. Click **Save** to save changes.

6.1.4. Video/Audio Enable

Configure the stream the Video and Audio support for a specific stream. **Steps**:

- 1. Go to Set → Video/Audio → Video Settings → Enable.
- 2. Select the Video/Audio.
- 3. Click Save to save changes.

Note
Disabling the Main Stream video is not supported.

6.1.5. Resolution

You can select video resolution according to actual needs on Main/Sub/Mobile Stream. Higher resolution requires a higher bandwidth and takes up a larger storage space. **Steps**:

1. Go to Set → Video/Audio → Video Settings → Resolution.

- 2. Select the **Resolution** you want to set.
- 3. Click **Save** to save and finish the settings.

6.1.6. Frame rate (FPS)

Frame rate is used to describe the frequency at which the video stream is updated, and it is measured by frames per second (fps). A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout. Note that a higher frame rate requires a higher bandwidth and takes up a larger storage space.

Steps:

1. Go to Set → Video/Audio → Video Settings → Frame rate (FPS).

- 2. Select the **Resolution** you want to set.
- 3. Click **Save** to save and finish the settings.

6.1.7. Bit Rate Type

CBR: Abbreviation for Constant Bit Rate. It means that the stream is compressed and transmitted at a comparatively fixed bitrate. The compression speed is fast, but mosaic may occur on the image. **VBR**: Abbreviation for Variable Bit rate. It means that the device automatically adjust the bitrate under the set Bitrate. The compression speed is slower than that of the constant bitrate. But it guarantees the image quality of complex scenes.

Steps:

- 1. Go to Set \rightarrow Video/Audio \rightarrow Video Settings \rightarrow Bit rate Type.
- 2. Select a Bitrate Type according to the needs.
- 3. Click Save.

6.1.8. Quality

When Bit Rate Type is set as VBR, video quality would be configurable. You can select a video quality according to your actual needs. Note that higher video quality often requires higher bandwidth. **Steps**:

- 1. Go to Set \rightarrow Video/Audio \rightarrow Video Settings \rightarrow Video Quality.
- 2. Select a Image quality.
- 3. Click Save to save changes.

6.1.9. Bit Rate (Kb/S)

The value of the bit rate is related on the video quality, higher video quality results in higher bit rate and requires a higher bandwidth. The limit of the bit rate value varies according to different resolution and image quality.

Steps:

- 1. Go to Set → Video/Audio → Video Settings → Bit Rate (Kb/S).
- 2. Select the **Bit Rate** you want to set.
- 3. Click **Save** to save and finish the settings.

6.1.10. | Frame Interval

Frame interval defines the number of frames between 2 I-frames. In H.264 and H.265, an I-frame, or intra frame, is a self-contained frame that can be independently decoded without any reference to other images. An I-frame consumes more bits than other frames.

Thus, video with more I-frames, in other words, smaller I-frame interval, generates more steady and reliable data bits while requiring more storage space.

Steps:

- 1. Go to Set → Video/Audio → Video Settings → I Frame Interval.
- 2. Enter I-Frame Interval (from 10 to 100 ms) in the input box.
- 3. Click Save.

6.2. Audio Setting

You can set audio parameters such as audio encoding, environment noise filtering in this section.

- Audio coding type: 2 coding methods are supported: G.711A/G.711U.
- Volume input: Ranges from 0-100 with a default value of 50.
- Noise reduction: By enabling, the audio noise will be reduced. Steps:
- 1. Go to Set → Video/Audio → Audio Settings.
- 2. Configure the parameters.
- 3. Click Save.

6.3. ROI

ROI (Region of Interest) encoding helps to assign more encoding resource to the region of interest. This feature can increase the quality of the ROI while the background information is less focused. **Steps**:

- 1. Go to Set \rightarrow Video/Audio \rightarrow ROI.
- 2. Check the Enable checkbox.
- 3. Select a Stream Type.
- 4. Select a **Region No** and draw an ROI region.
- 5. Select an option under Level Up and input the Regional Name.
- 6. Click **Save** to save changes.

7. Optional: You can select unused region No. and repeat the steps above if you need to draw multiple ROI regions.

6.4. Snapshot Setting

You can configure the snapshot settings in this section. The snapshots will be taken when events trigger snapshot.

Steps:

- 1. Go to Set → Video/Audio → Snapshot Settings.
- 2. Select the **Resolution** and **Quality**.
- 3. Click Save.

6.5. OSD Setting

In this section, you can customize OSD (On-screen Display) information such as device name, time/date, font, color, and text overlay displayed on video stream.

Steps:

- 1. Go to Set \rightarrow Video/Audio \rightarrow OSD.
- 2. Enter in the Channel Name to be set.

3. Check and uncheck the **Channel title**, **Time title** checkboxes to specify whether they are displayed on screen.

4. Optional: Left click the OSD information on live video and drag it to the ideal position.

5. Click Save.

6.6. Image Superposition

This function support to upload a picture show on video.

Note Only certain device models support the function.

Before you start :

Prepare the picture file in bmp format, with 24-bit pixels, and the length and width should not exceed 128*128.

Steps:

- 1. Go to Set → Video/Audio → Image Superposition.
- 2. Click Browse to select the picture you want to upload.
- 3. Click Upload.
- 4. Enable the Image.

Optional:

Set the Transparency: Set the Transparency to 1, input the color number (R/G/B) you want to transparency.

Set picture position: Left-click the picture you uploaded, move to the position you want to set. 6. Click **Save**.

7. Event and Alarm Configuration

This part introduces the configuration of events and how the device responds to a triggered alarm.

🕑 Note

The Event and Alarm configuration may vary depending on the model. Please be subject to the actual Web interface.

7.1. Motion Detection

This feature detects moving objects in the detection area and trigger actions set for this event.

Steps:

- 1. Go to Set → Event → Basic Event → Motion detection.
- 2. Check the **Enable** checkbox.
- 3. Set the **Sensitivity**: Motion detection alarm event is more prone to be triggered with a higher sensitivity.

4. Set the **Detect Region**: Drag the mouse in the preview area to specify the detection area (Red marked areas are selected).

5. Set the Arming Schedule for Motion Detection.

) 2	4	6	8	10	12	14	16	18	20	22	24	
	- 51		10	f.	Sun.	a S	- 1	1.	r	T.		Set
1	8	8	12	- ¹	Mon.	8	3	8	8	4		Set
			10	1	Tue.	i.			1	10		Set
	e.	2	6	5	Wed.			1	1	1		<mark>Set</mark>
			1.1	1	Thu.	ł				1		Set
	1	2	5	5	Fri.	8	2		15			Set
					Sat.							Set

Figure 7-1 Schedule

1) Click Set to set the detect time for each day.

chedule1	00:00:00	∂ ~ 23∶59	:59 \ominus 🗹	Schedule2	00:00:00	~ 23:59:59	\ominus \Box	
chedule3	00:00:00	∂ ~ 23∶59	:59 👌 🗆	Schedule4	00:00:00	~ 23:59:59	\ominus \Box	
chedule5	00:00:00	∂ ~ 23∶59	:59 👌 🗆	Schedule6	00:00:00	~ 23:59:59	\ominus \Box	
Copy to othe	er week							
Sun. 🔽	Mon.	Tue.	Wed.	Thu. 🗌 🛛 Fri.	Sat.			

Figure 7-2 Set

- 2) Set the Interval time (During the interval time, device will detect/alarm).
- 6. To set the actions performed after being triggered, click Actions.

Alarm Output	1
Alarm Delay	10 Sec 10~300
Show Message	🗌 Send Email 🗌 Buzzer
Record Delay	10 Sec 10~300
Record Channel	
1	
PTZ Act	Set
Tour	
1	
🗹 Snapshot	
1	

Figure 7-3 Actions

Alarm Delay: Duration of the alarms.

Send Email: When motion detection is triggered, the device will send emails to configured email addresses. For Email Setting please refer to *4.3.7 Email*.

Record Channel: When motion detection is triggered, the device will start to record with this channel.Record delay time: The device will keep recording for this period after the motion detect event ends.Set Snapshot: When motion detection is triggered, the device will take snapshots of the video.

7. Click Save.

7.2. Video Cover Detection

When the configured area is covered and cannot be surveilled normally, the alarm will be triggered and the device will make certain alarm response. **Steps**:

- 1. Go to Set → Event → Basic Event → Video Cover Detection.
- 2. Check the **Enable** checkbox.

3. Set the **Sensitivity**: The cover detection alarm event is more prone to be triggered with a higher sensitivity.

- 4. Set the Arming Schedule for Motion Detection. Click Set to set the detect time for each day.
- 5. To set the actions performed after being triggered. Click Actions.
 - Set the Alarm output, Alarm delay, send email. Alarm delay time: Duration of the alarms. Send email: When motion detection is triggered, it will send the email. Email setting please reference the 4.3.7 Email. Note: Alarm out function only support the camera which support the alarm out.
 - Set Record delay time, record channel.
 Record Channel: When cover detection is triggered, the device will start to record with this channel.
 Record delay time: The device will keep recording for this period after the cover detect event ends.
 - 3) Set **Snapshot.** When cover detection is triggered, device will take snapshots of the video.
- 6. Click **Save**.

7.3. Alarm in/out

7.3.1. Alarm Input

Alarm signal from the external device triggers the corresponding actions of the current device. **Before you start**

Alarm signal from the external device triggers the corresponding actions of the current device. **Steps**:

- 1. Go to Set \rightarrow Event \rightarrow Camera I/O \rightarrow Alarm Input.
- 2. Check the Enable checkbox.
- 3. Set the Type: Normal Close/Normal Open.
- 4. Set the **Arming Schedule** for Motion Detection.
 - 1) Click **Set** to set the detect time for each day.
 - 2) Set the Interval time (During the interval time, device will alarm).
- 5. Set the linkage actions. Click Actions.
 - Set the Alarm out, Alarm delay, send email. Alarm delay time: Duration of the alarms. Send email: When alarm input event is triggered, the device will send emails to configured email addresses. For Email Setting please refer to 4.3.7 Email. Buzzer: Set alarm input linkage buzzer.
 - Set Record delay time, record channel.
 Record Channel: When alarm input event is triggered, it will start to record with this channel.
 Note: Record delay time: The device will keep recording for this period after the alarm input event ends.
 - 3) Set **Snapshot.** When motion detection is triggered, the device will take snapshots of the video.

6. Click Save.

7.3.2. Alarm Output

If the device is connected to an alarm output device, and the alarm output No. is configured properly, the device will send alarm information to the connected alarm output device when an alarm is triggered.

Steps:

1. Go to Set \rightarrow Event \rightarrow Camera I/O \rightarrow Alarm Output.

- 2. Set the Type: Schedule, Manual, Stop.
- 1) **Schedule**: Alarm output will be on, when an alarm is triggered in the configured schedule.
- 2) Manual: Alarm out will always be on.
- 3) **Stop**: Alarm out will always be off.

Note: You can check the Alarm Out status via the status, when it white means no alarm out; when it red means Alalrm out is on.

3. Click Save.

7.4. Smart Event

7.4.1. Line Crossing Detection

It is used to detect objects crossing a pre-defined virtual line. If it occurs, the device can take linkage actions. **Steps**:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Line Crossing.
- 2. Check the checkbox of **Enable** to enable the function. **Optional**: You can select the Human/Vehicle filter, the Line crossing will be triggered only by Human/Vehicle.
- 3. Select Warning surfaces you want to set.
- 4. Click the **Plot Area** button, and a virtual line is displayed on the live image.
- 5. Click-and-drag the line, and you can locate it on the live image as desired.

6. Click on the line, two red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

- 7. Select the **Direction** for line cross detection. And you can select the directions:
- A<->B: When an object goes across the configured line from both direction can be detected and alarms are triggered.
- A->B: Only the object crossing the configured line from the A side to the B side can be detected.
- **B->A**: Only the object crossing the configured line from the B side to the A side can be detected.

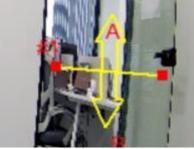


Figure 7-4 Line Crossing

- 8. Set the **Sensitivity**: The Line Crossing is easier to detect when the value is higher.
- 9. Set the Arming Schedule and Actions. Please refer to 7.1 Motion detection for details.
- 10. Optional: Check the checkbox of **Dynamic Tracking** to enable the dynamic tracking lines and smart rules.

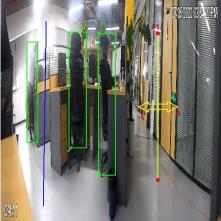


Figure 7-5 Enable Dynamic Tracking

11. Click **Save** to save and finish the settings.

7.4.2. Area Intrusion Detection

It is used to detect objects entering and loitering in a pre-defined virtual region. If it occurs. When it occurs, the device can take linkage actions.

Steps:

- 1. Go to Set → Event → Smart Event → Area Intrusion.
- Check the checkbox of Enable to enable the function.
 Optional: You can select the Human/Vehicle filter, the Area Intrusion will be triggered only by Human/Vehicle.
- 3. Select Warning surfaces you want to set.
- 4. Draw Area :
- 1) Click the **Plot Area** button, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

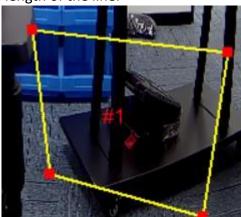


Figure 7-6 Area Intrusion

5. Set the Time Threshold.

Indicates that an alarm will be generated after the target object enters the warning area and stays for this period of time. For example, if it is set to 0, the alarm will be triggered immediately after the target object invades the area. The maximum is 10 seconds.

6. Set the **Sensitivity**.

The sensitivity setting affects the size of the intruding object that will be judged as the target object. A higher sensitivity setting may identify smaller objects as the target, while a lower sensitivity setting may identify larger objects as the target. Set the Percent.

It indicates how much of the invaded area is required to trigger the alarm, the percentage value is taken for input.

7. Set the Percent.

Indicates that when the area of the warning area invaded by the target object reaches the percentage of the area of the warning area, the alarm message will be triggered.

- 8. Set the Arming schedule and Actions. Please refer to 7.1 Motion detection setting for details.
- 9. Optional: Check the checkbox of **Dynamic Tracking** to enable the dynamic tracking lines and smart rules.
- 10. Click **Save** to save and finish the settings.

7.4.3. Region Entrance Detection

It is used to detect objects entering a pre-defined virtual region from the outside place. When it occurs, the device can take linkage actions.

Steps:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Region Entrance.
- Check the checkbox of Enable to enable the function.
 Optional: You can select the Human/Vehicle filter, the Area Intrusion will be triggered only by Human/Vehicle.
- 3. Select Warning surfaces you want to set.
- 4. Draw Area :
- 1) Click the **Plot Area** button, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

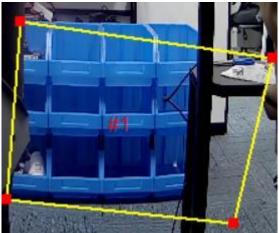


Figure 7-7 Region Entrance

5. Set the **Sensitivity**.

The sensitivity setting affects the size of the intruding object that will be judged as the target object. A higher sensitivity setting may identify smaller objects as the target, while a lower sensitivity setting may identify larger objects as the target.

- 6. Set the Arming schedule and Actions. Please refer to 7.1 Motion detection setting for details.
- 7. Optional: Check the checkbox of **Dynamic Tracking** to enable the dynamic tracking lines and smart rules.
- 8. Click **Save** to save and finish the settings.

7.4.4. Region Exiting Detection

It is used to detect objects exiting from a pre-defined virtual region. When it occurs, the device can take linkage actions.

Steps:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Region Exiting.
- Check the checkbox of Enable to enable the function.
 Optional: You can select the Human/Vehicle filter, the Area Intrusion will be triggered only by Human/Vehicle.
- 3. Select Warning surfaces you want to set.
- 4. Draw Area :
- 1) Click the **Plot Area** button, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

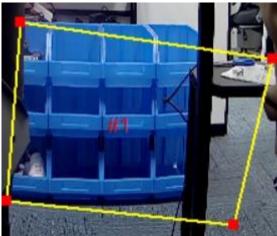


Figure 7-8 Area Intrusion

5. Set the **Sensitivity**.

It is used to set and control the size of the target object. The higher the sensitivity setting, the smaller the object exiting the area will be judged as the target object. The lower the sensitivity setting, the larger the object exiting the area will be judged as the target object.

- 6. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 7. Optional: Check the checkbox of **Dynamic Tracking** to enable the dynamic tracking lines and smart rules.
- 8. Click **Save** to save and finish the settings.

7.4.5. Blurred Detection

The blurred image caused by lens defocus can be detected. If it occurs, the device can take linkage actions.

Steps:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Blurred Detection.
- 2. Check the checkbox of **Enable** to enable the function.
- 3. Select Warning surfaces you want to set.
- 4. Set the **Sensitivity**.

The Blurred Detection is easier to trigger with higher sensitivity value.

5. Set the Percent.

It indicates how much of the invaded area is required to trigger the alarm, the percentage value is taken for input.

- 6. Set the Arming schedule and Actions. Please refer to 7.1 Motion detection setting for details.
- 7. Click **Save** to save and finish the settings.

7.4.6. Scene Change Detection

Scene change detection function detects the change of surveillance scene. When it occurs, the device can take linkage actions.

Steps:

- 1. Go to Set → Event → Smart Event → Scene Change.
- 2. Check the checkbox of **Enable** to enable the function.
- 3. Set the **Sensitivity**. The Scene Change Detection is easier to trigger if the sensitivity is higher.
- 4. Set the Arming schedule and Actions. Please refer to 7.1 Motion detection setting for details.
- 5. Click **Save** to save and finish the settings.

7.4.7. Fast Moving Detection

Support to detect the object which fast move in the area.

Steps:

- 1. Go to Set → Event → Smart Event → Fast Moving.
- 2. Check the checkbox of **Enable** to enable the function.
- 3. Select Warning surfaces you want to set.
- 4. Draw Area:
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

5. Set the **Sensitivity**: It is used to set the moving speed of the control object. The higher the sensitivity setting, the slower the moving speed of the object will trigger the alarm message. The lower the sensitivity setting, the faster the moving speed of the object will trigger the alarm message.

6. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.

7. Click **Save** to save and finish the settings.

7.4.8. Loitering Detection

Support to detect the object which wandering in the Area. **Steps**:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Loitering Detection.
- 2. Check the checkbox of **Enable** to enable the function.
- 3. Select Warning surfaces you want to set.

4. Draw Area :

- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

5. Set the

Sensitivity: It is used to set and control the size of the target object. The higher the sensitivity setting, the smaller the object in the wandering area will be judged as the target object. The lower the sensitivity setting, the larger the object in the wandering area will be judged as the target object.

Time Threshold: Indicates the time to be reached when the target hovers in the warning area. For example, if it is set to 0s, the alarm message will be triggered once the target has a wandering behavior.

Offset: When select Offset, whether the loitering behavior occurs will be judged according to whether the amount of the target object's linear movement in the area exceeds a certain threshold. When the target object enters the area in the first frame, the first position of the target object is recorded and the distance is calculated. When the distance is greater than (the distance between the current frame and the first frame plus 3/7 of the screen width (pixels)), it is considered that the hovering behavior occurs.

Weight: When select Weight, It will be judged whether the wandering behavior occurs according to the number of times the target object turns back in the area to reach a certain threshold. The number of turns is counted from the first frame when the target object enters the area. The threshold is 3.

Journey: Whether the loitering behavior occurs will be judged according to whether the total distance moved by the target object in the area exceeds a certain threshold. The total distance is calculated from the first frame when the target enters the area. The threshold is the longest diagonal length of the region.

6. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.

7. Click **Save** to save and finish the settings.

7.4.9. People Gathering Detection

Support to detect the select area whether has people gathering. **Steps**:

- 1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow People Gathering.
- 2. Check the checkbox of **Enable** to enable the function.
- 3. Select Warning surfaces you want to set.
- 4. Draw Area :
- 1) Click the **Plot Area** button, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the

- 4) red squares to define the shape and length of the line.
- 5. Set the

Sensitivity: It is used to set and control the intensity of concentration of the target object.

Percent: A total of 1-100 is optional, which is used to control the density of the edge pixels of the object in the area. The higher the proportion, the more pixels on the edge of the object in the area can trigger the alarm. The lower the proportion, the fewer pixels on the edge of the object in the area can also trigger the alarm.

- 6. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 7. Click **Save** to save and finish the settings.

7.4.10. Unattended Object Detection

It is used to detect the objects left over in the pre-defined region. Linkage methods can be triggered after the object is left and stays in the region for a set time period. **Steps**:

1. Go to Set → Event → Smart Event → Unattended Object.

- 2. Check the checkbox of **Enable** to enable the function.
- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

4. Set the

Sensitivity: It is used to set the change range of the control target object. The higher the sensitivity, the larger the change range of the left object in the warning area will be judged as the target object. The lower the sensitivity, the smaller the change range of the left object in the warning area can be judged as the target object.

Time Threshold: Indicates the time required for the target object to be left in the warning area. For example, if it is set to 5s, the target object will be left for 5s before the alarm message will be triggered. Note: It takes 10s to judge whether the target object is left behind.

5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.

6. Click **Save** to save and finish the settings.

7.4.11. Object Missing Detection

It detects whether the objects are removed from the pre-defined detection region, such as the exhibits on display. If it occurs, the device can take linkage actions and the staff can take measures to reduce property loss.

Steps:

1. Go to Set \rightarrow Event \rightarrow Smart Event \rightarrow Object Missing.

2. Check the checkbox of **Enable** to enable the function.

- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.

3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

4. Set the

Sensitivity: It is used to set the change range of the control lost target. The higher the sensitivity, the greater the change range of the lost position of the object in the warning area, and it will be judged as a lost target. The lower the sensitivity, the smaller the change range of the lost position of the object in the warning area. Only then can it be judged as a lost target. When the pixels in the area are always moving, the sensitivity is high, and the lost position can be found in the case of large changes

Time Threshold: Indicates the time required for the target object to be left in the warning area. For example, if it is set to 5s, the target object will be left for 5s before the alarm message will be triggered. Note: It takes 10s to judge whether the target object is left behind.

- 5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 6. Click Save to save and finish the settings.

7.4.12. Parking Detection

Support to detect whether has car park in the region. **Steps**:

1. Go to Set → Event → Smart Event → Parking Detection.

2. Check the checkbox of **Enable** to enable the function.

- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.
- 4. Set the

Sensitivity: It is used to set and control the size of the target object. The higher the sensitivity setting, the smaller the detected object will be judged as the target object. The lower the sensitivity setting, the larger the detected object will be judged as the target object.

Time Threshold: Indicates the time required for the target object to stay in the warning area. For example, if it is set to 5s, the target object stay for 5s before the alarm message will be triggered.

5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.

6. Click **Save** to save and finish the settings.

7.4.13. Audio Exception Detection

Audio exception detection function detects the device surrounding sound whether has strong sound or dropped sharply sound.

Steps:

- 1. Go to Set → Event → Smart Event → Audio exception detection.
- 2. Check the checkbox of Abnormal audio input, Strong sound intensity, Sound intensity dropped sharply.
- 3. Set the sensitivity. The higher the value is, the more abnormal audio to be detected.
- 4. You can check the Real-time volume shape from the picture.

Real-time volume		

Figure 7-9 Real-time Volume

5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.

6. Click **Save** to save and finish the settings.

7.5. Face Detection

This function support to detect the human face in the detection region and trigger the linkage actions.

Note
Only certain device models support the function.

7.5.1. Configure the Face Detection

Steps:

- 1. Go to Set → Event → Face Detection →Base.
- 2. Check the checkbox **Enable** the function.
- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.
- 4. Set the **sensitivity**. The higher the value is, the more face shape can be detected.
- 5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 6. Click **Save** to save and finish the settings.

7.5.2. Overlay and Capture Settings

Steps:

1. Go to Set → Event → Face Detection → Overlay and capture.

2. Set the

Capture configuration: You can set the face picture name as default or Custom prefix it with 1-15 characters.

Monitoring point parameters: You can set the device ID and Monitoring point information. **OSD statistics:** You can set the OSD statistics **Open/Stop**.

3. Click **Save** to save and finish the settings.

7.6. Body Detection

This function support to detect the human shape in the detection region and trigger the linkage actions.

🕑 Note

Only certain device models support the function.

Steps:

- 1. Go to Set → Event → Body Detection.
- 2. Check the checkbox Enable the function.
- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.
- 4. Set the **Sensitivity**: The higher the value is, the more human shape can be detected.
- 5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 6. Click **Save** to save and finish the settings.

7.7. Car Shape Detection

This function support to detect the car shape in the detection region and trigger the linkage actions.

🕑 Note

Only certain device models support the function.

Steps:

- 1. Go to Set → Event → Car shape Detection.
- 2. Check the checkbox Enable the function.
- 3. Draw Area :
- 1) Click the **Plot Area button**, and a virtual rectangle is displayed on the live image.
- 2) Click-and-drag the rectangle, and you can locate it on the live image as desired.
- 3) Click on the line, four red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.
- 4. Set the **Sensitivity**: The higher the value is, the more car shape can be detected.
- 5. Set the Arming schedule and Actions. Details reference the 7.1 Motion detection setting.
- 6. Click **Save** to save and finish the settings.

7.8. Crossing Line Statistics

This function support to statistic the number of crossing line movement.

Before you start:

The camera must insert the Micro-SD card to support this function. The statistics date will be saved in Micor SD card.

7.8.1. Configure the Crossing line statistics

This function support to statistics the number of crossing line. **Steps:**

- 1. Go to **Set →Crossing line statistics.**
- 2. Check the checkbox **Enable** crossing line statistics, Enable OSD overlay.
- 3. Click Smart regulation to set the crossing line parameters.

1) Click 📕 to Draw the crossing line

2) Click 🖾 to change the direction of drawing line.

3) Click 🔟 to delete the drawing line.

Optional:

Click on the line, 2 red squares are displayed on each end, and you can Click-and-drag one of the red squares to define the shape and length of the line.

Left click the OSD information, move to the position you want to set. Will show the crossing line In/Out numbers on the OSD.

- 4. Set the Arming time, click Set to set the schedule.
- 5. Click **Save** to save and finish the settings.

7.8.2. Check the Crossing line statistics data

Support to check the Crossing line statistics data as list/chart/Histogram Steps:

- 1. Click Application, Enter the interface.
- 2. Select to choose Report range: Daily/Weekly/Monthly/Annual report
- 3. Select to choose **Statistics type**: Enter / Leave the number of people.
- 4. Select the Start time.
- 5. Click Statistics.
- 6. Check the Statistics result, you can check with list/Polyline chart/Histogram
- 7. Optional: Support to export the date as .xls file to PC
- 8. Click **Export** to export the file.

8. Recording to Local Storage/NAS

This chapter introduces the functions for recording management and configuration.

🕑 Note

Only certain device models which support the Local Storage (Micro-SD card) or the NAS features support these features.

8.1. Record and Snapshot

You can configure the record and snapshot behaviors in this section.

8.1.1. Record setting

Steps:

- 1. Go to Set → Storage → Record → Record Schedule.
- 2. You can enable the checkbox to choose recording the videos with Main stream or Sub stream.
- 3. Set the Pack Duration and Pre-Record.
- Pack duration: The length of time that cameras will segment the video file into.
- Pre-Record: The length of camera's pre-record time for the event recordings (0-30s).
- 4. Set the Record type at Record Control: Schedule, Manual, Stop.
- Schedule: Camera will follow the Record Plan to record.
- Manual: Camera will always be recording (7*24h).
- **Stop**: Camera will stop recording.
- 5. Set the Record Plan.
- 1) Select the Record type Normal, MD and Alarm.
- 2) And click Set to set each day's record Plan, click OK.

	No	ormal				MD			1		larm		
0	2	4	6	8	10	12	14	16	18	20	22	24	
	<u>.</u>	- 22	2	- 33	1	Sun.					8		Delete
						Sun.							Set
			10.				10						Delete
						Mon.							Set
	- N		46	- 10			6	3926	<u>.</u>				Delete
						Tue.							Set
_	2	- 5	10	- 09			- 97	- 10.22	- 2 -		- 9		Delete
						Wed.							Set
		2	2	- 33	1		2		- 3	2	8		Delete
						Thu.							Set
			10	a.		1	ta.		-	4			Delete
						Fri.							Set
		_	18					_	_		_	_	
						Sat.							Delete
													Set

Figure 8-1 Set Record Plan

- 6. Set the Record type at Record Control section: Schedule, Manual, Stop.
- Schedule: Camera will follow the Record Plan to record.

- Manual: Camera will always in record (7*24h).
- **Stop**: Camera will stop recording.
- 7. Click **Save** to save and finish the settings.

8.1.2. Snapshot Setting

This section involves settings of the snapshot features.

• Set Parameter of interval snapshot

Camera will take snapshots at the configured time interval. **Steps:**

- 1. Go to Set → Storage → Record → Snapshot Setting→Time Picture.
- 2. Check the **Enable** checkbox to enable snapshot by interval time.
- 3. Set the Interval time you want to set.
- 4. Set the Schedule.
- 5. Click **Save** to save and finish the settings.

Set Parameter of Alarm Snapshot

Camera will snapshot when the alarm in has the signal input. **Steps:**

- 1. Go to Set \rightarrow Storage \rightarrow Record \rightarrow Snapshot Setting \rightarrow Alarm Snapshot.
- 2. Check the checkbox to enable snapshot by Alarm.
- 3. Set the Interval time you want to set.
- 4. Set the Snap Count.
- 5. Click **Save** to save and finish the settings.

Event-Triggered Snapshot

Camera will snapshot when the Event-Triggered. **Steps:**

- 1. Go to Set \rightarrow Storage \rightarrow Record \rightarrow Snapshot Setting \rightarrow Event-Triggered Snapshot.
- 2. Check the checkbox to enable snapshot by Event-Triggered.
- 3. Set the Interval time you want to set.
- 4. Set the Snap Count.
- 5. Click **Save** to save and finish the settings.

8.2. Storage Manager

8.2.1. Local Storage Manage (Micro-SD Card)

After inserting the Micro-SD Card properly, you can access its information as a local storage device, and our devices support to manage it. Go to Set \rightarrow Storage \rightarrow Storage Management.

• Format/Delete the Micro-SD Card

The function is used to Format/Delete the Micro-SD Card. **Steps:**

- 1. Select the device you want to manage.
- 2. Click Format/Delete.

Set the storage rule when HDD full Steps:

- Click the HDD Full Overwrite/Stop from the drop down menu. Overwrite: When storage is full, camera will overwrite the oldest file. Stop: When storage is full, camera will stop recording.
- 2. Click **Save** to save and finish the settings.

• Quota Storage for record and picture

Steps:

1. Click the **Record Quota (%)** / **Picture Quota(%)** to set the parameters. Camera will quota the capacity for record and picture storage as you set.

2. Click **Save** to save and finish the settings.

8.2.2. Connect to NAS

The function used to save the recording/picture file to the NAS.

Before you start:

Valid NAS service is needed within the same network section. **Steps**:

1. Go to Set → Storage → Storage Management → NAS.

	NAS	2
2	NAS	2
3	NAS	2
4	NAS	2
	Figure	e 8-2 NAS

- 2. Double click one of the option to access its Config.
- 3. Input the NAS Server Address, File Path, Mount Type, Space (GB).
- 4. Click **Test** if success click OK; if failed please check the parameters again.
- 5. Click **Save** to save and finish the settings.

	Config	
Disk No.	1	
Type	NAS	
Server Address		
File Path		
Mount Type	NFS	
Space(GB)	2	
User Name		
Password		
Test	Save	Return

Figure 8-3 Config

9. Maintain

This chapter introduces the maintenance details.

9.1. Reboot Device

You can the reboot the device via web access. The devices also support Auto-reboot with configured schedules.

- Reboot device manually via browser Steps:
- 1. Go to **Set** \rightarrow **Maintain** \rightarrow **Auto Reboot**.
- 2. Click the **Reboot**, and click **OK** to confirm the operation.
- 3. Device will reboot, and re-route your web page back to the login page.
- Auto-reboot the device at the certain time Steps:
- 1. Go to Set → Maintain → Auto Reboot.
- 2. Set the time you want to reboot.
- 3. Click **Save** to save changes.

9.2. Restore and Default Settings

Restore and Default helps restore the device parameters to the default values.

• Restore default setting

Steps:

- 1. Go to Set → Maintain → Default Settings.
- 2. Select the type of settings you want to restore.
- 3. Click Execute to perform the operation.
- Restore factory setting

Steps:

- 1. Go to Set → Maintain → Default Settings.
- 2. Click Restore factory and Execute to restore everything to default.

🕑 Note

Be careful when using this function. After resetting to the factory default, all the parameters are reset to the default settings.

9.3. Config Export/Import

It helps speed up batch configuration on other devices that need to have the same parameters. **Steps:**

- 1. Go to Set → Maintain → Import/Export.
- 2. Click Export Config **Execute**, select the folder you want to save the config file.
- 3. Click Import Config Execute, select the config file you want to Import.

9.4. Upgrade device

Before You Start

You need to obtain the correct upgrade package.

/! Caution

DO NOT disconnect power during the process, the device reboots automatically after the upgrade.

Steps:

- 1. Go to Set \rightarrow Maintain \rightarrow Upgrade.
- 2. Click Select upgrade file.
- 3. Click Upgrade.

9.5. Search and Manage Log

Log will record the device operations, it helps to locate and analyze problems. **Steps:**

- 1. Go to Set \rightarrow Maintain \rightarrow Log.
- 2. Set the Type, Start time, End time.
- 3. Click **Search**. The matched log will be displayed on the log list.
- 4. Additionally, click **Backup** to save the log files in your computer.

10. Playback and download video

This chapter introduces how to use the playback functions and download video from the local storage. **Before you start**

Insert the Micro-SD card and configure a valid recording schedule for device.

10.1. Playback the Recording Video

Steps:

- 1. Go to Playback.
- 2. Click the date you want to search for the recordings. Black marked date means it has the record video.

Device will search the record file on this date.

3. Select the type of video you want to play,



- 4. Click Last to play the video or left click on the video timeline you want to play.
- 5. Additionally, click it is switch to video list page, Click the operation button.

Click to stop video	Click to Play the video with slow speed (x1/2,x1/4,x1/8)				
II Click to Pause the video	Click to play the video with fast Speed (x2,x4, x8, x16)				
Click to Play the video by frame	Click to snapshot current picture				
Click to Enable/Disable the audio	Click to Switch to the video file list page				
Click to Control and switch the time bar					
Click to access the record file downlo	pad list				

Table 10-1 Description of the items

10.2. Download the Video File

Steps:

- 1. Go to Playback.
- 2. Click to enter the download page.

- 3. Select the **Type (**Record/Picture) you want to download.
- 4. Set the Start time, End time, click **Search.** It will show the video/picture list.
- 5. Select the file you want to download.
- 6. Select the video file format (DAV/AVI).
- 7. Click **Download**.

	No.	Start Time	End Time	Record File Size(KB)	Channel	Туре	Encoding Format
Record 👻	01	2023- 1:59:59	2023 00:00:00	308	1	Time Record	H265
All Record Event Record Manual Record Time Record	2	2023-):00:00	2023 00.04:38	86018	1	Time Record	H265
	3	2023-):04:38	2023 00:18:21	253739	1	Time Record	H265
	4	2023-):18:21	2023 00:32:03	253739	1	Time Record	H265
	5	2023- 1:32:03	2023 00:45:46	253741	1	Time Record	H265
	6	2023-):45:46	2023 00:59:28	253740	1	Time Record	H265
	7	2023- 1:59:28	2023 01:13:11	253740	1	Time Record	H265
Parameter	8	2023- :13:11	2023 01:26:53	253739	1	Time Record	H265
Start Time	9	2023- :26:53	2023 01:40:36	253740	1	Time Record	H265
2023-(00:00:00	10	2023- :40:36	2023 01:54:18	253739	1	Time Record	H265
2023-(00.00.00	0 11	2023- :54:18	2023 02:08:01	253740	1	Time Record	H265
End Time	12	2023- ::08:01	2023 02:21:43	253739	1	Time Record	H265
2023-(23:59:59	13	2023- 2023-	2023 02:35:26	253740	1	Time Record	H265
Channel	14	2023- 1:35:26	2023 02:49:08	253740	1	Time Record	H265
	15	2023- ::49:09	2023 03:02:51	253740	1	Time Record	H265
All Channel 🔹	16	2023- 02:51	2023 03:16:33	253739	1	Time Record	H265
Operation	17	2023- 16:34	2023 03:30:16	253740	1	Time Record	H265
	18	2023- 1:30:16	2023 03:43:58	253739	1	Time Record	H265
Search	19	2023- 1:43:59	2023 03:57:41	253739	1	Time Record	H265
	20	2023- 1:57:41	2023 04:11:24	253740	1	Time Record	H265
Stop Download	21	2023- 1:11:24	2023 04:25:06	253739	1	Time Record	H265
	22	2023- k:25:06	2023 04:38:49	253741	1	Time Record	H265
DAV O AVI	23	2023- k:38:49	2023 04:52:31	253747	1	Time Record	H265
	24	2023- k:52:31	2023 05:06:14	253750	1	Time Record	H265
	25	2023- i:06:14	2023 05:19:56	253746	1	Time Record	H265

Figure 10-2 Download

The video file will start to download, and save to the PC folder.

To find the file, check the configured saving path from **4.1 Local Storage**.